


PRODUCT FEATURES

- Secures up to 5" mineral wool.
- Shoot it, screw it, or nail it.
- Install into any substrate, including wood, metal, or masonry.
- Made from mill galvanized steel to prevent corrosion.
- Unlike adhesive stick pins, the Grip-Lok MW plate provides permanent attachment of mineral wool to the substrate.
- Curled sides provide rigidity and prevent sharp edges.

*Bend the barb flush against the surface of the mineral wool surface once impaled.

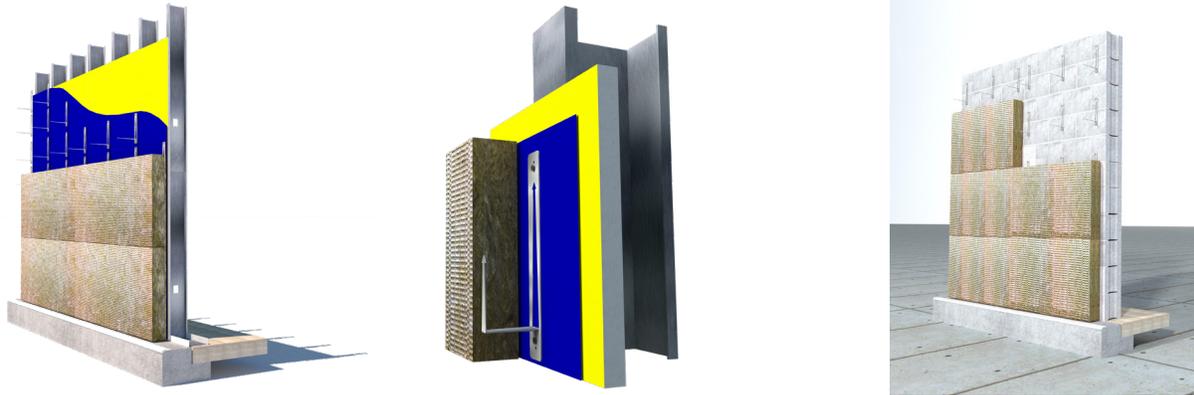

INSTALLATION GUIDELINES

1. ATTACH THE PLATE TO THE SUBSTRATE

Securely fasten the Grip-Lok MW Plate to the building's substrate.

2. BEND THE BARB

Bend the barb on the plate 90 degrees.

3. IMPALE THE INSULATION

Press the plate through the mineral wool insulation, using the bent barb to impale it.

4. FOLD FLUSH

Fold the barb back down, making it flush against the surface of the insulation to hold it in place.



Bulletin No. TFW-24082

DISCLAIMER

The information provided here is subject to change without notice. The performance specifications published in this TRUFAST® Walls product literature are based on controlled laboratory tests and are intended as a guideline only. They are not guaranteed in any way by the ALTENLOH, BRINCK & CO. US, INC., since building

design, engineering, and construction, including workmanship and materials, are beyond the control of the manufacturer. The manufacturer recommends that pull-out tests be conducted to verify the substrate provides adequate pull-out values.